 



Settings

To configure Gobachi Smart Player go to settings, press OK to enter the settings of the device. You will see different settings tabs giving different settings for the device (see image below).

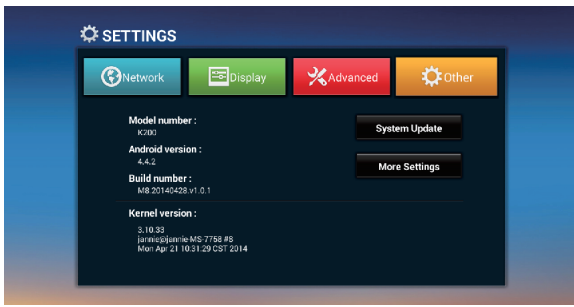


Connect to Wi-Fi

 To configure Wi-Fi settings, go to Network menu and select "More Settings" option. A new window will open. Select Wi-Fi checkbox. A list of available access points (AP) will be displayed in the below window. Select the AP you want to connect with. A new window will pop-up asking for the password for the selected AP. If right password is provided it will connect to the AP. A new icon will be displayed in the home screen indicating that your device is connected through Wi-Fi.

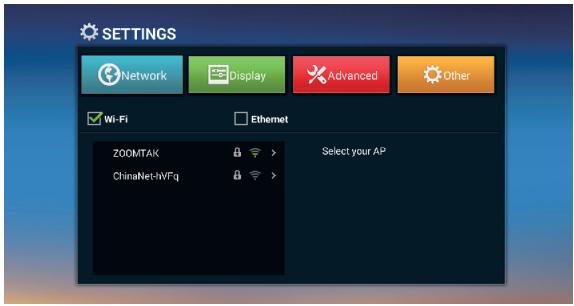

Connect through Ethernet

Gobachi Smart Player can also be connected to the network using the internet cable (Ethernet). To connect through Ethernet, simply plug-in the Ethernet cable in the RJ45 jack provided on the input interface provided on the device. Then go to settings > Network. You will see two options Wi-Fi and Ethernet. Select the Ethernet checkbox. Status below will provide you the detail about the connection and IP etc.

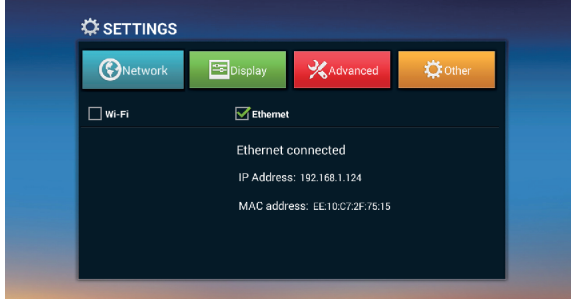

Troubleshooting

Warning

Never try to repair the device by yourself as this will void the warranty for the device. Do not open the box as it may result in electric shock. If your device is not working properly please check the instructions provided below before taking the box for repairing. If the problem still remains unsolved please consult the local dealer for help.

Problem	Solution
No signal on the TV	1) Check if the device and TV are properly connected through HDMI/ AV cable. 2) Check if you have selected the correct input source on your TV.
Can not turn on your Smart Player	1) Check if the power cable is properly plugged in the DC socket of your Smart Player. 2) Check if the power supply is stable.
Can not connect to network	1) Check if the network is available on some other device. 2) Check if the password provided for the AP is correct or has been changed for the AP. 3) If IP settings are required for the connection, make sure that the settings have been properly made.
Remote Control does not respond	1) Make sure the batteries are good. 2) Make sure the distance between the remote control and your Smart Player is less than 8 meters.
Part of the screen is not visible on the TV	Go to settings> Display> Display Position and configure the device properly to show all of the contents of the Smart Player on the TV.

Warranty

The warranty provided for Gobachi Smart Player is valid for a period of twelve (12) months from the date of original delivery to buyer, the product manufactured by the seller are warranted to be free from functional defects in materials and workmanship, provided they are operated under conditions of normal use. Third party software included are warranted only under the warranty provided by such third party manufacturer for such software.



User Guide



Preface

Thank you very much for choosing Gobachi Smart Player. In order to better understand the device and for detail guidance please read this product manual thoroughly. Please keep this manual at safe place for later use.

Disclaimer

The information contained in this manual is for guidance purposes only and for the user to better understand the overall functions and use of the product. Actual specification of the product may vary from the specification provided here in this product manual. We reserve the right to make changes to the hardware, software and manual of the device. To get latest updates about the device, new features and detailed guidance on how to use this device, please visit our website www.gobachi.com

Specification


Structure	All new aluminium housing for best cooling
Processor	Amlogic S805 Quad core Cortex A5 1.5GHz
GPU	Mali-450MP GPU (Graphics 3D acceleration supported)
RAM	1GB DDR3, 8 GB NAND FLASH
Operating System	Android 4.4 KitKat OS 3D
Decoder Formats	HD MPEG1/2/4 , H.264, H.265, HD AVC/VC- 1/RM/ RMVB, Xvid/DivX
Supported Media Formats	AVI/ RM/ RMVB/ TS/ VOB/ MKV/ MOV/ ISO/ WMV/ ASF /FLV/ DAT/ MPG
Supported Audio formats	MP3/WMA/AAC/WAV/OGG/AC3/DDP/ TrueHD/ DTS/ HD/ FLAC/ APE
Photo formats	HD JPEG/BMP/GIF/PNG/TIFF
USB host	4 high speed USB2.0, USB HDD, SD/SDHC/cards
File System	FAT16/FAT32/NTFS
Subtitles Supported	SRT/SMI/SUB/SSA/IDX+USB DolbyTrueHD, DTS, AC3
Interface Language	English/ French/ German/ Spanish/ Italian etc.
Connectivity	Ethernet 10/100M, standard RJ-45 port, WiFi Support 802.11 b/g/n, 2.4G/5.8G Dual Band WiFi, Bluetooth V4.0
Mouse/Keyboard	Wireless mouse and keyboard via USB dongle
Other Features	Miracast, KODI, Skype, Youtube, Facebook, online movies, internet browsing, thousands of android APPS, games etc.

Package Contents

Serial No.	Picture of Item	Name of Item	Number of Items
1		Gobachi Smart Player	1
2		IR remote control	1
3		Power Adaptor	1
4		HDMI Cable	1
5		User Guide	1

Note: Other contents are optional.

 
Remote Control

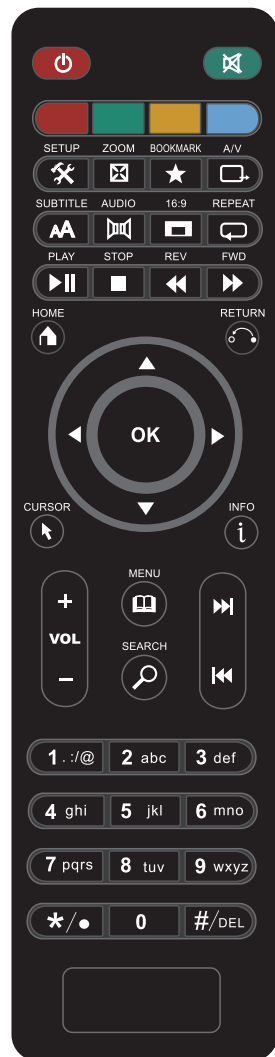

Button Definition

	Power on/off		Mute
	Red Button		Green Button
	Yellow Button		Blue Button
	Settings		Zoom in/out
	Bookmark		A/V output
	Subtitle		Audio L/R
	Screen Ratio		Repeat
	Play/Pause		Stop
	Rewind		Forward
	Home		Return
		Navigation: Press to navigate Left/Right/ Up/ Down Press OK to confirm your selection	
	Cursor/ IR		Information
	Menu		Search
	Volume Up		Next One
	Volume Down		Last One
	Symbols, Letters, Number Buttons		Delete

 Connection Diagram

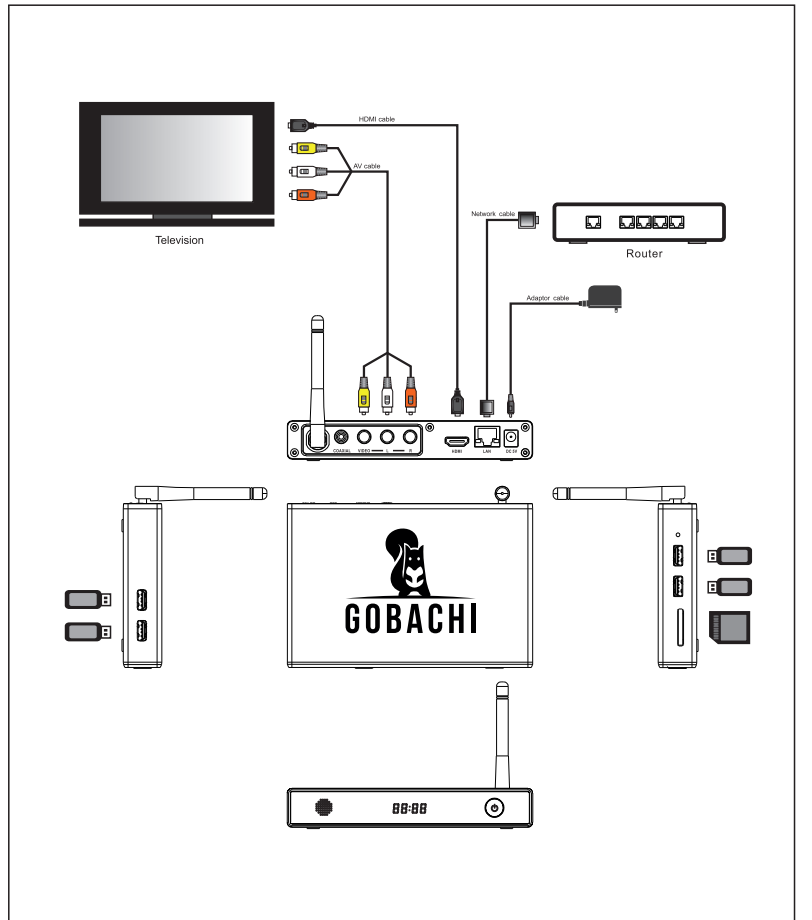

HDMI connection

 
- Connect HDMI cable through the HDMI port provided at the back of the Gobachi Smart Player
- Your TV output display settings must be set to 720p or 1080p

AV connection

Gobachi Smart Player comes with multi connectivity options, so even if your TV has no HDMI connectivity port, you can still enjoy using this device by connecting it through the A/V connections. Simply connect your Gobachi Smart Player and TV using AV cable.


Settings

To configure Gobachi Smart Player go to settings, press OK to enter the settings of the device. You will see different settings tabs giving different settings for the device (see image below).

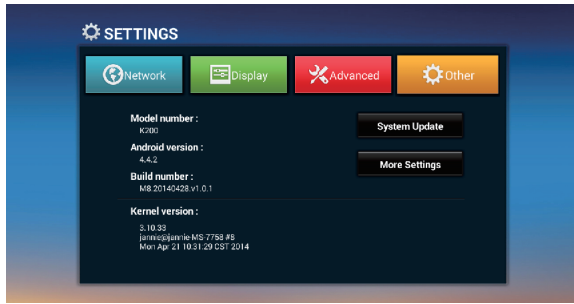


Connect to Wi-Fi

 To configure Wi-Fi settings, go to Network menu and select "More Settings" option. A new window will open. Select Wi-Fi checkbox. A list of available access points (AP) will be displayed in the below window. Select the AP you want to connect with. A new window will pop-up asking for the password for the selected AP. If right password is provided it will connect to the AP. A new icon will be displayed in the home screen indicating that your device is connected through Wi-Fi.

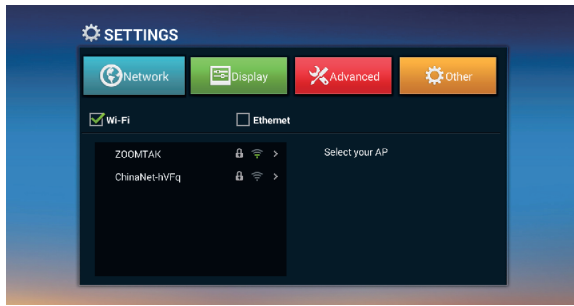

Connect through Ethernet

 Gobachi Smart Player can also be connected to the network using the internet cable (Ethernet). To connect through Ethernet, simply plug-in the Ethernet cable in the RJ45 jack provided on the input interface provided on the device. Then go to settings > Network. You will see two options Wi-Fi and Ethernet. Select the Ethernet checkbox. Status below will provide you the detail about the connection and IP etc.

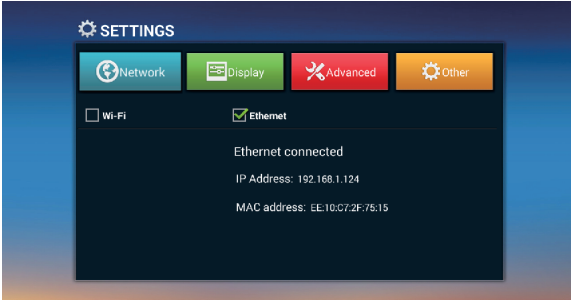

Troubleshooting

Warning

Never try to repair the device by yourself as this will void the warranty for the device. Do not open the box as it may result in electric shock. If your device is not working properly please check the instructions provided below before taking the box for repairing. If the problem still remains unsolved please consult the local dealer for help.

Problem	Solution
No signal on the TV	1) Check if the device and TV are properly connected through HDMI/ AV cable. 2) Check if you have selected the correct input source on your TV.
Can not turn on your Smart Player	1) Check if the power cable is properly plugged in the DC socket of your Smart Player. 2) Check if the power supply is stable.
Can not connect to network	1) Check if the network is available on some other device. 2) Check if the password provided for the AP is correct or has been changed for the AP. 3) If IP settings are required for the connection, make sure that the settings have been properly made.
Remote Control does not respond	1) Make sure the batteries are good. 2) Make sure the distance between the remote control and your Smart Player is less than 8 meters.
Part of the screen is not visible on the TV	Go to settings> Display> Display Position and configure the device properly to show all of the contents of the Smart Player on the TV.

Warranty

The warranty provided for Gobachi Smart Player is valid for a period of twelve (12) months from the date of original delivery to buyer, the product manufactured by the seller are warranted to be free from functional defects in materials and workmanship, provided they are operated under conditions of normal use. Third party software included are warranted only under the warranty provided by such third party manufacturer for such software.



User Guide



Preface

Thank you very much for choosing Gobachi Smart Player. In order to better understand the device and for detail guidance please read this product manual thoroughly. Please keep this manual at safe place for later use.

Disclaimer

The information contained in this manual is for guidance purposes only and for the user to better understand the overall functions and use of the product. Actual specification of the product may vary from the specification provided here in this product manual. We reserve the right to make changes to the hardware, software and manual of the device. To get latest updates about the device, new features and detailed guidance on how to use this device, please visit our website www.gobachi.com

Specification

Structure	All new aluminium housing for best cooling
Processor	Amlogic S805 Quad core Cortex A5 1.5GHz
GPU	Mali-450MP GPU (Graphics 3D acceleration supported)
RAM	1GB DDR3, 8 GB NAND FLASH
Operating System	Android 4.4 KitKat OS 3D
Decoder Formats	HD MPEG1/2/4 , H.264, H.265, HD AVC/VC- 1/RM/ RMVB, Xvid/DivX
Supported Media Formats	AVI/ RM/ RMVB/ TS/ VOB/ MKV/ MOV/ ISO/ WMV/ ASF /FLV/ DAT/ MPG
Supported Audio formats	MP3/WMA/AAC/WAV/OGG/AC3/DDP/ TrueHD/ DTS/ HD/ FLAC/ APE
Photo formats	HD JPEG/BMP/GIF/PNG/TIFF
USB host	4 high speed USB2.0, USB HDD, SD/SDHC/cards
File System	FAT16/FAT32/NTFS
Subtitles Supported	SRT/SMI/SUB/SSA/IDX+USB DolbyTrueHD, DTS, AC3
Interface Language	English/ French/ German/ Spanish/ Italian etc.
Connectivity	Ethernet 10/100M, standard RJ-45 port, WiFi Support 802.11 b/g/n, 2.4G/5.8G Dual Band WiFi, Bluetooth V4.0
Mouse/Keyboard	Wireless mouse and keyboard via USB dongle
Other Features	Miracast, KODI, Skype, Youtube, Facebook, online movies, internet browsing, thousands of android APPS, games etc.

Package Contents

Serial No.	Picture of Item	Name of Item	Number of Items
1		Gobachi Smart Player	1
2		IR remote control	1
3		Power Adaptor	1
4		HDMI Cable	1
5		User Guide	1

Note: Other contents are optional.


Remote Control



Button Definition

	Power on/off		Mute
	Red Button		Green Button
	Yellow Button		Blue Button
	Settings		Zoom in/out
	Bookmark		A/V output
	Subtitle		Audio L/R
	Screen Ratio		Repeat
	Play/Pause		Stop
	Rewind		Forward
	Home		Return
	Navigation: Press to navigate Left/Right/ Up/ Down Press OK to confirm your selection		
	Cursor/ IR		Information
	Menu		Search
	Volume Up		Next One
	Volume Down		Last One
	Symbols/Letters, Number Buttons		Delete

 Connection Diagram

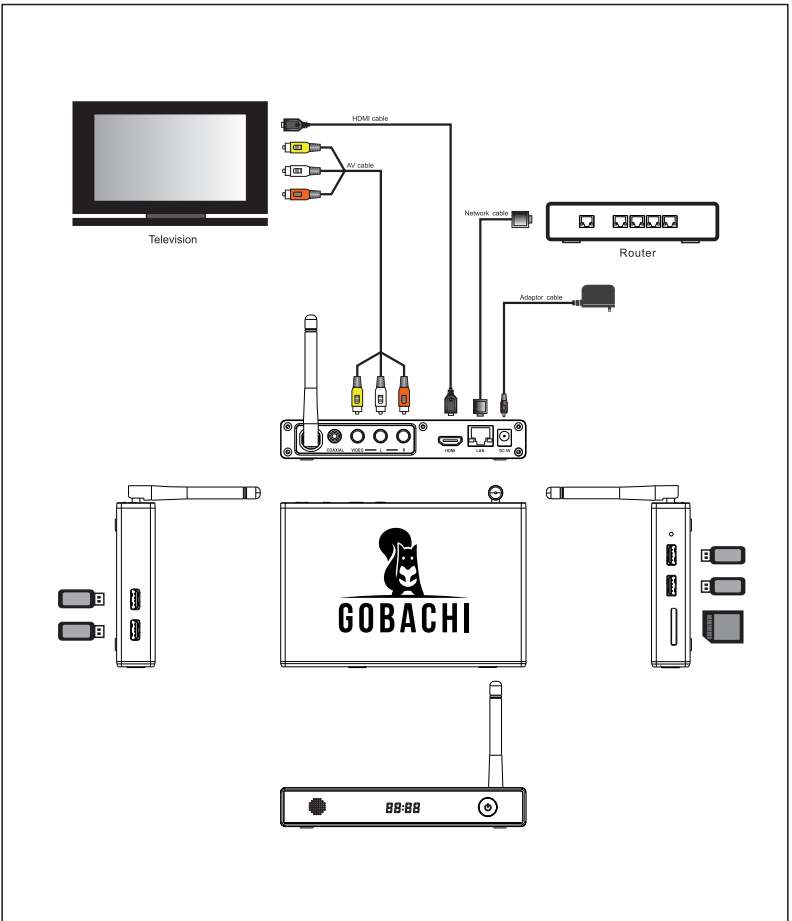

HDMI connection

- Connect HDMI cable through the HDMI port provided at the back of the Gobachi Smart Player
- Your TV output display settings must be set to 720p or 1080p

AV connection

Gobachi Smart Player comes with multi connectivity options, so even if your TV has no HDMI connectivity port, you can still enjoy using this device by connecting it through the A/V connections. Simply connect your Gobachi Smart Player and TV using AV cable.